Touch Keypad Phidget

Contents

1 GETTING STARTED 2 USING THE HIN1000 2.1 Phidget Control Panel 2.1.1 Windows 2.1.2 macOS 2.2 First Look 2.3 Capacitive Touch

3 TECHNICAL DETAILS

3.1 Re-Calibration

3.2 Current Consumption

4 WHAT TO DO NEXT

Getting Started

Welcome to the HIN1000 user guide! In order to get started, make sure you have the following hardware on hand:

- HIN1000 Touch Keypad Phidget
- VINT Hub
- USB cable and computer
- Phidget cable

Next, you will need to connect the pieces:



- 1. Connect the VINT Hub to your computer with a USB cable.
- 2. Connect the HIN1000 to the VINT Hub using the Phidget cable.

TO TOP

Using the HIN1000

Phidget Control Panel

In order to demonstrate the functionality of the HIN1000, the Phidget Control Panel running on a Windows machine will be used.

The Phidget Control Panel is available for use on both macOS and Windows machines.

Windows

To open the Phidget Control Panel on Windows, find the **(D)** icon in the taskbar. If it is not there, open up the start menu and search for Phidget Control Panel



macOS

To open the Phidget Control Panel on macOS, open Finder and navigate to the Phidget Control Panel in the Applications list. Double click on the operation to bring up the Phidget Control Panel.

For more information, take a look at the getting started guide for your operating system:

- Getting started with Windows
- Getting started with macOS

Linux users can follow the getting started with Linux guide and continue reading here for more information about the HIN1000.

First Look

After plugging the HIN1000 into your computer and opening the Phidget Control Panel, you will see something like this:

Phid	Phidget Control Panel				
File I	Help				
Phidgets	Network Service	PhidgetSBCs			
Name - Local Phidgets			Serial #	Channel	Version
É-∜ VINT Hub Phidget			370181		117
E	Port 0				
E- Touch Keypad Phidget					104
-Capacitive Touch Sensor				0	
-Capacitive Touch Sensor				1	
	-Capacitive Touch Sensor			2	
	-Capacitive Touch Sensor			3	
	-Capacitive Touch Sensor			4	
	-Capacitive Touch Sensor			5	
	Capacitive	e Touch Sensor		6	
e	Port 1				
6	Port 2				
Dort 3					
G	Port 4				
6	Port 5				
Double C	Log	<u>15</u> 🔕:			

The Phidget Control Panel will list all connected Phidgets and associated objects, as well as the following information:

- Serial number: allows you to differentiate between similar Phidgets.
- **Channel:** allows you to differentiate between similar objects on a Phidget.
- Version number: corresponds to the firmware version your Phidget is running. If your Phidget is listed in red, your firmware is out of date. Update the firmware by double-clicking the entry.

The Phidget Control Panel can also be used to test your device. Double-clicking on an object will open an example.

Capacitive Touch

Capacitive Touch	n Sensor	19 <u>11</u>		×	
Phidget Info Attached: HIN100	00 - Touch Keypad Ph	idget			
Version: 104 Channel: 0	Hub Serial Number: Hub Port:	370011 0			
Settings Change Trigger:	max		Data Last Value: Touch?	1.000	
Sensitivity:		High			

When you double click on a Capacitive Touch object, a window like the one pictured will open.

- At the top of the window, information about your device and the properties of this particular channel will be listed.
- On the left, change trigger and/or data interval can be changed. For more information on these settings, see the Data Rate/Change Trigger page. In addition, the sensor's sensitivity can be adjusted. The higher the sensitivity, the more susceptible the sensor will be to sensing touch.
- On the right, the **Touch?** check box will be checked if an object is touching or nearly touching the surface associated with this capacitive touch object. For capacitive touch objects that have a linear or circular touch region, the **Last Value** corresponds to the location on the region that the current or most recent touch occurred.

Technical Details

Re-Calibration

Since capacitive touch sensors rely on checking capacitance against a threshold to detect when they are touched, they need to keep a good baseline of the capacitance of their environment. The HIN1000 will re-calibrate its baseline levels if it detects a constant touch for more than 60 seconds, in order to prevent getting stuck in a touched state. Similarly, it will re-calibrate its baseline capacitance to adjust to falling capacitance (such as when it is moved away from a surface) in order to prevent getting stuck in a not-touched state. The latter adjustment happens soon after the baseline is detected to have fallen.

Current Consumption

The current consumption of the HIN1000 varies depending on the data interval that you choose. When it is connected but not configured, it will draw a minimal current of around 50 μ A. Once it has been configured, current consumption will increase as the interval between data events is shortened, as illustrated by this graph:



What to do Next

- Software Overview Find your preferred programming language here to learn how to write your own code with Phidgets!
- General Phidget Programming Read this general guide to the various aspects of programming with Phidgets. Learn how to log data into a spreadsheet, use Phidgets over the network, and much more.
- Phidget22 API The API is a universal library of all functions and definitions for programming with Phidgets. Just select your language and device and it'll give you a complete list of all properties, methods, events, and enumerations that are at your disposal.